

New Plug-in Control User's Manual

4. Reset the door closing limit separately, press and hold the "▲" or "▼" button on the control to the door closing limit position, and then press the "↺" button on the control for twice.

II. Transmitters learning (for the buttons used below, please refer to Figure 1 / Figure 2)


Short press the "○" button on the control for about 1 second. After the buzzer beeps, press and hold the handle of the remote control "●" for 2 seconds. The buzzer will make a long beep, indicating that the handle has been successfully learned.

III. Delete the transmitter (for the buttons used below, please refer to Figure 1)


Press and hold the "○" button on the control for about 8 seconds, until the buzzer starts to beep and release, and the transmitter is successfully deleted.

IV. Special functions of the single-button transmitter (for the buttons used below, please refer to Figure 2)

1. In use mode, press and hold "●" on the remote control for 1 second to close the door.
2. In factory reset, long press and hold "●" on the remote control, the motor will do the dot movement in one direction. Click "●" on the remote control twice in succession to change the dot movement direction of the motor.
3. Long press and hold the code button for 1 second to start the control into the code status.
4. Press the code button 5 times in succession to delete the lock.

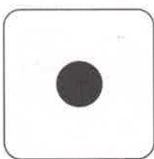

Code Key

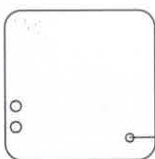

(Figure 2)

I. Limit setting (please refer to Figure 1 for the keys used below)


a. Factory Reset: Empty Limit status (blue indicator light is always on)

1. Press the "▲" or "▼" button on the control to make the door run to the door opening limit position, and then release it. Press the "↺" button once, and the buzzer will short beep for 3 times, indicating that the opening limit is set successfully.

2. Press and hold the "▲" or "▼" button on the control to make the door move to the closing limit position, then release it. Press the "↺" button on the control, the buzzer will short beep for twice and then long beep for once, indicating that the closing limit is set successfully.

b. Use mode: Limit status (blue indicator is off)


1. Press and hold the "↺" button on the control for about 5 seconds, until the buzzer starts to beep and release, and enter the reset limit mode.
2. Reset the open limit and close limit at the same time. The setting method is the same as the empty limit status setting method.
3. Reset the door opening limit separately, press and hold the "▲" or "▼" button on the control to the door opening limit position, and then press the "↺" button on the control for twice.

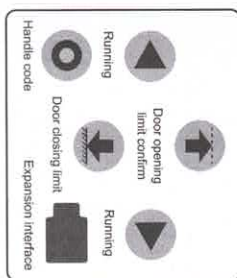

(Figure 1)

V. Special function of manual button (Please refer to Figure 3 for the buttons used below)

In the init setting status, press the "▲" and "■" buttons of the manual button at the same time to set the door opening limit, and press the "▼" and "■" of the manual button at the same time to set the door closing limit.

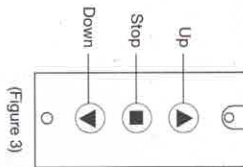

VI. The indicator status

1. The blue light is always on to indicate the empty limit status.
2. The blue light is always off to indicate normal use.
3. Slow blinking blue light indicates running status.
4. Steady red light means the power is normal.
5. There are 3 situations when the red light is off:
 - a. No mains access, please check the power supply.
 - b. The fuse is blown, please replace the fuse.
 - c. The high-voltage circuit board is faulty, please replace the circuit board.

Disclaimer

Once the product is sold, the company does not assume any responsibility for the property loss or personal injury caused by the motor being damaged or unable to be used normally because it is not installed or used as shown in the instruction manual.