

Control System

Radio+




DD3002H

15-channel LCD Emitter


Instruction

Version: A/00

Instruction Of Buttons

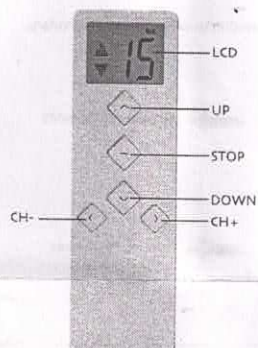

DD3002H
15-channel LCD emitter

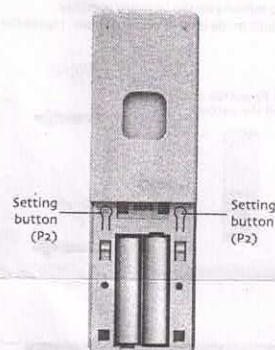

DD3002H
Back

Technical specification


Battery: 3V (AAA battery × 2)	Battery life: >2 years	Radio frequency: 433.05~434.79MHz
Working temperature: -10℃~50℃	Transmitting power: 10 mW	Radio range: outdoor> 150 meters, indoor> 35 meters

Warning

1. Emitter couldn't expose to moisture or be striked heavily, or else the emitter life will be affected.
2. If the emitter is not so sensitive or the radio range becomes shorter, pls check whether to change the battery.
3. If you press any button more than 20S, the emitter will stop sending radio signals.
4. It's forbidden to use different type battery to avoid any dangerous risk.
5. Dispose of used batteries properly.


Max. Channels Adjustment

Note: 1. In the setting status, press UP or DOWN button to exit quickly.
2. Repeat the same process if you want to adjust the Max. channels.

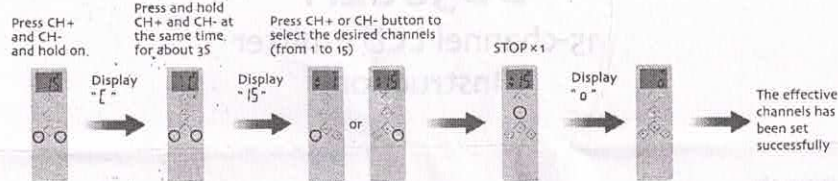

Uni-directional / Bi-directional Mode Switch

Note: 1. Both the two P2 buttons on the back are operable.
2. The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circularly.

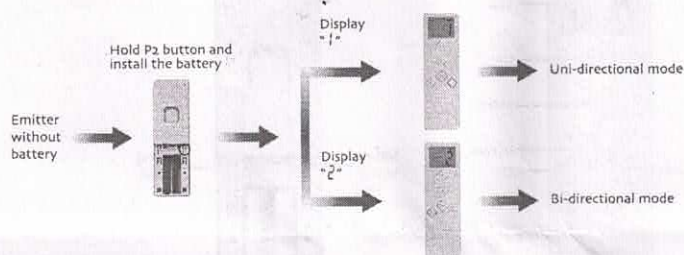

Combination Button Lock / Unlock Operation

Note: 1. Both the two P2 buttons on the back are operable.
2. If there is no operation for 10 seconds, it will automatically exit the setting status.
3. The factory default is unlock status, repeat same operation to switch status circularly.
4. Under lock status, the combination buttons don't work; Under unlock status, the combination buttons will work normally.
5. Only the transmitting code will be affected if the combination buttons are locked.

