


DM25LEU/S

Radio+

Instruction | A-09



Features

- Built-in Receiver
- Jog & Tilt
- Built-in Lithium Battery
- Scan and Program
- Status Feedback
- Switch Direction
- Stall Protection
- Program Button
- Reset to Factory Mode
- Memorized Setting
- Electronic Limit
- Preferred Stop Position
- Speed Regulation
- Scene Control

Fields of Application



The motor is suitable for motorization of roller blinds.






Specifications

| | |
|--|--------------------------------|
| Working Temperature: -10°C ~ +60°C | Radio Frequency: 433.92MHz |
| Input Voltage: USB 5VDC 1A / USB 5VDC 2A | Max. Single Running Time: 6min |

* For more motor models and specific torque, please refer to the nameplate.



Attention

Never drop, knock, drill or submerge the motor. Keep the power cable in right position as following. Important safety instructions to be read before installation. Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

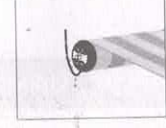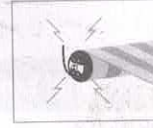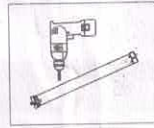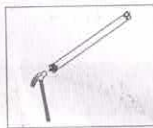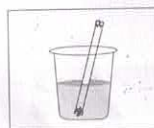

Charging Instructions

Micro-USB Port

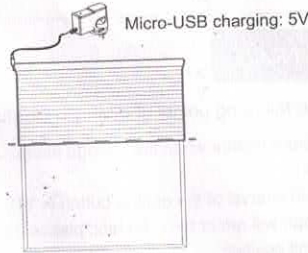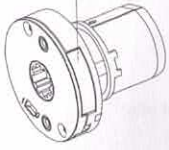

This motor has a built in Li-ion battery pack with integrated charge management.

Max power input for recharging: 5V 2A.

Before first use please charge motor for 6 hours. Using 5V charger (most phones charger is 5V).

During operation, when the motor starts, the buzzer will beep 10 times, indicating a low-voltage alarm and needs to be charged.

During operation, the voltage was detected to be too low, the battery was about to run out, the battery stopped running and needed to be recharged.


Rechargeable Battery



Blinking red:
Low battery alert




Blinking green:
Charging is
processing




Solid green:
full charged


Portable Charger For Emergency Usage




Motor Installation

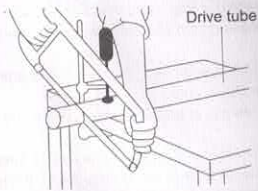


Step 1 Cut drive tube to required length.

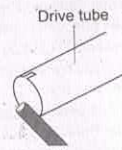

Step 2 Ensure tube edge is clean and burr-free.

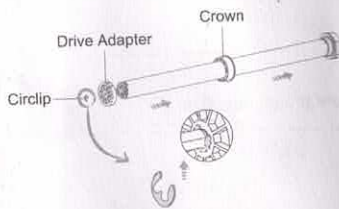

Step 3 Mount correct crown & drive adapter on the motor. Make sure drive adapter fits firmly and crown rotates freely.

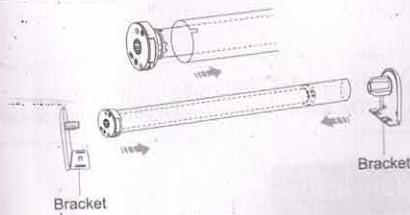

Step 4 Align the notches on the crown and drive adapter with the drive tube, slide and fit the motor into drive tube. Mount idler and bracket on both ends.

Caution

1. Do not expose motor to humid or extreme temperature conditions.
2. Do not drill into motor.
3. Do not cut the antenna and keep it clear from metal objects.
4. Do not allow children to play with this device.
5. If power cable or connector is damaged, do not use.
6. Ensure correct crown and drive adaptor are used.
7. Ensure power cable and aerial is clear and protected from moving parts.
8. Cable routed through walls shall be properly isolated.
9. Motor is to be mounted in horizontal position only.
10. Before installation, remove unnecessary cords and disable equipment not needed for powered operation.
11. Installation and programming to be performed by a qualified professional, use or modification outside the scope of this instruction may void warranty.


3 Upper and Lower Limits Setting

1 Set upper limit



Press UP for 2S, operate the motor to desired upper limit position, press and hold UP and STOP buttons simultaneously for 2S (2 jogs and 3 beeps), upper limit is set.

2 Set lower limit




Press DOWN for 2S, operate the motor to desired lower limit position, press and hold DOWN and STOP buttons simultaneously for 2S (2 jogs and 3 beeps), lower limit is set.

* If exit the limits setting status before you finish the limit setting, then the motor will take the previous limits if has; After the limits have been set successfully, the motor will enter the user mode.

User mode


1 Add A Preferred Position

1 Set preferred position



Check both upper and lower limits are set. Operate the product to desired preferred position. Press P2 (1 jog and 1 beep), press STOP (1 jog and 1 beep), STOP again (2 jogs and 3 beeps), the preferred position is set.

2 Remove preferred position



Press P2 (1 jog and 1 beep), press STOP (1 jog and 1 beep), STOP again (1 jog and make a long noise), the preferred position is deleted.

* Press STOP for 2S, the motor moves to preferred position automatically.

2 Jog Mode & Running Mode Switch




Press and hold UP and DOWN buttons simultaneously for 5S (1 jog), press STOP (1 jog and make a long noise), switch to jog mode, if motor jog twice and beep 3 times, switch to running mode.

* When in jog mode, press UP or DOWN once, the motor will be jog running, if press more than 2 second, the motor will be continuously running.


3 Adjust Limits

1 Adjusting the upper limit



Press and hold UP and STOP buttons for 5S (1 jog and make a long noise), operate the product to desired new upper limit position, press and hold UP and STOP buttons for 2S (2 jogs and 3 beeps), the new upper limit is programmed successfully.

2 Adjusting the lower limit




Press and hold DOWN and STOP buttons for 5S (1 jog and make a long noise), operate the product to desired new lower limit position, press and hold DOWN and STOP buttons for 2S (2 jogs and 3 beeps), the new lower limit is programmed successfully.

* After entering the limits fine tuning mode, the original preferred position will not be deleted; If there is no button operation within 2 minutes, it will arrive within 2 minutes, and the motor will turn to prompt, and automatically exit the route adjustment mode; When fine-tuning the limit, press and P1 for more than 2S to exit the mode.

4 Pair / Unpair Additional Emitter


Method one



Press P2 (1 jog and 1 beep) and P2 (1 jog and 1 beep) on existing emitter, press P2 on new emitter to add (2 jogs and 3 beeps), new emitter is paired to the motor.


* Repeat same procedure will unpair additional emitter

Method two



Press P2 (1 jog and 1 beep) and P2 (1 jog and 1 beep) on existing emitter, press STOP on new emitter for 2S to add (2 jogs and 3 beeps), new emitter is paired to the motor.

Method three




Press P1 button for 2S (1 jog), release button and make a long noise, press STOP on new emitter for 2S to add (2 jogs and 3 beeps), new emitter is paired to the motor.

• Repeat same procedure will unpair additional emitter.

* (a) as existing emitter, (b) as new emitter to pair/unpair; Adding the emitter should be carried out when there is a limits; All the setting of the motor will be kept after adding the new emitter.


5 Speed Regulation / Setting Motor Slow Stop Operation Mode

1 Acceleration setting / Activate the motor slow stop operation mode



Press P2 (1 jog and 1 beep), press UP (1 jog and 1 beep), UP again (2 jogs and 1 beep), the motor running speed is accelerated. When the motor is at the Max. speed, the motor jogs-once and make a long noise after the last operation, and the motor slow stop operation mode is activated.

2 Deceleration setting / Deactivate the motor slow stop operation mode



Press P2 (1 jog and 1 beep), press DOWN (1 jog and 1 beep), DOWN again (2 jogs and 1 beep), the motor running speed is decelerated. When the motor is at the Min. speed, the motor jogs once and beep once after the last operation, and the motor slow stop operation mode is deactivated.

* The motor has 3 speed levels, the Max. speed: 28rpm; the Med. speed: 24rpm; the Min. speed: 20rpm. the factory default is 28rpm, slow stop mode (only works after the limits setting).

Quick Index

| Settings | Steps |
|---|---|
| 1 Pairing | P1 (hold down 2s) → Stop (hold down 2s) |
| 2 Switch Rotating Direction | Up + Down (hold down 2s) |
| 3 Upper and Lower Limits Setting | 1 Set upper limit Up (hold down 2s) → Up + Stop (hold down 2s) |
| | 2 Set lower limit Down (hold down 2s) → Down + Stop (hold down 2s) |
| 4 Add / Remove Preferred Position | P2 → Stop → Stop |
| 5 Jog Mode & Running Mode Switch | Up + Down (hold down 5s) → Stop |
| 6 Adjust Limits | 1 Adjusting the upper limit Up + Stop (hold down 5s) → Up or Down → Up + Stop (hold down 2s) |
| | 2 Adjusting the lower limit Down + Stop (hold down 5s) → Up or Down → Down + Stop (hold down 2s) |
| 7 Pair / Unpair Additional Emitter | 1 Pair / Unpair Additional Emitter P2(a) → P2 (a) → P2(b) |
| | 2 Pair Additional Emitter P2(a) → P2 (a) → Stop (b) (hold down 2s) |
| | 3 Pair / Unpair Additional Emitter P1 (hold down 2s) → Stop (b) (hold down 2s) |
| 8 Speed Regulation / Setting Motor Slow Stop Operation Mode | 1 Acceleration setting / Activate the motor slow stop operation mode P2 → Up → Up |
| | 2 Deceleration setting / Deactivate the motor slow stop operation mode P2 → Down → Down |

Troubleshooting

| Issues | Possible causes | Solution |
|---|---|--|
| The motor has no response | Battery in motor is depleted | Recharge with compatible AC adaptor |
| | Power Failure Or Incorrect Connection | Double check power and cable connections, follow wiring instructions. |
| | emitter battery is low capacity | Replace battery |
| | Radio interference / shielding | Check antenna on motor is intact and exposed. Check for possible source of radio interference. |
| | Out of radio control range | Try control within closer range |
| The emitter can't control single motor | Multiple motors are paired to the same channel. | Pair single motor with emitter correctly |
| | | Try to use multi-channel emitters to control multi-motor projects, ensure each channel to control one single motor |
| The motor doesn't run or starts too slowly or make loud noise | Connections are incorrect. | Check connections |
| | Installation is improper or overload | Check installation or overload |
| | | Adjust the new lower limit |

SAFETY NOTE

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** the drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.
6. The instructions shall state that the A-weighted emission sound pressure level of the drive is equal to or less than 70 dB(A), e.g. by writing $L_{pA} \leq 70 \text{ dB(A)}$.
7. The mass and the dimension of the driven part shall be compatible with the rated torque and rated operating time.
8. The type of driven part the drive is intended for.
9. **WARNING:** Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
10. Do not allow children to play with fixed controls. Keep remote controls away from children.
11. Frequently examine the installation for imbalance and signs of wear or damage to cables and springs. Do not use if repair or adjustment is necessary.
12. Watch the moving shutter and keep people away until the shutter is completely closed.
13. **WARNING:** Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.
14. Before installing the drive, remove any unnecessary cords and disable any equipment not needed for powered operation.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.
17. Disconnect the drive from the supply or switch off the automatic controls when maintenance, such as window cleaning, is being carried out in the vicinity.

